


How to Remove a 15L Tapered Pail Cover



Figure 1. Pail Components

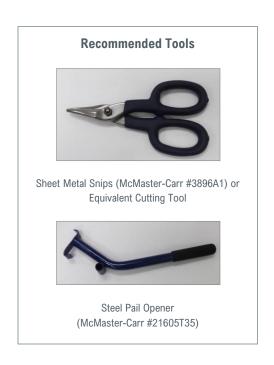

- 1. Cut ½" slits in the Cover Skirt about 3"-4" apart around the entire circumference of the lid (Figure 2).
- 2. Position the Pail Tool between the Slits and pry the Cover Skirt upwards (Figure 3).



Figure 2. Place the Cutting Tool Under the Cover Skirt and Cut $\frac{1}{2}$ " Slits from the Bottom Up, 3"-4" Apart



Figure 3. Repeat Step 2 Around the Entire Circumference of The Pail

3. Lift the Cover upward to remove. If portions of the Cover are still latched, repeat Step 2 until all the portions of the Cover are unlatched.





Figure 5. Lift Cover Up and Open Pail