

Model 485 Dispensing Systems

User Guide



Contents

| Safety2 | |
|-----------------------------------------------|---|
| Using Safe Operating Pressures3 | |
| Configuration Overview3 | |
| Key System Connections4 | |
| Dispensing Tips6 | |
| System Configurations7 | |
| A - Systems Using a Cartridge Retainer 8 | |
| B - Systems Using a Bottle Drop-In Tank 1 | 0 |
| C - Systems Using a 10-Gallon Pressure Tank 1 | 3 |

Safety

Using Safe Operating Pressures

Pressurizing the components in the dispensing system beyond the maximum recommended pressure can result in the rupturing of components and serious personal injury. To minimize the risk of rupturing components and injury, do not exceed the maximum operating pressure of the components in your fluid dispensing system.

Operating Specifications

- Recommended compressed air supply pressure to air filter/regulator = 80 to 100 psi (5.5 to 6.9 bar)
- Recommended pressure setting at air filter/regulator = 75 psi (5.2 bar)
- Maximum pressure setting at air filter/regulator = 100 psi (6.9 bar)
- Power required = 110V power receptacle (customer supplied)

Configuration Overview





1

Controls

Dymax valves and digital controller provide precise and consistent actuation.

- Pneumatic function
- Footswitch, manual, or PLC controlled
- Easy to operate
- Manual or timed dispense mode

2

Dispensing Valve & Accessories

Dymax dispensing valves for handheld and bench-top applications deliver precision solutions for low-to high-viscosity materials. Various style tips and accessories are also available.

3

Reservoirs

Dymax carries a variety of material reservoirs to accommodate most dispensing applications.

- Range of volumes from 6 oz. cartridges to 10-gallon pressure tanks
 - Easy change-over and control

Key System Connections

NOTE: Figures 1-4 apply to all systems.

Figure 1. Valve Air & Material Connections

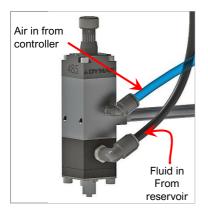


Figure 2.
Controller Connections, Rear Panel



Figure 3. High-Precision Regulator Connections


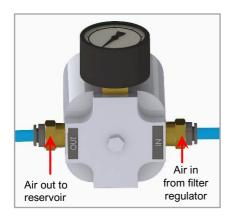


Figure 4. Filter Regulator

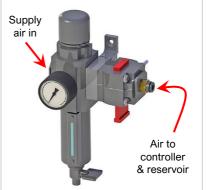

Dispensing Tips

A variety of both needle and taper dispense tips in various lengths, gauges, and shapes are available from Dymax. Tip selection is critical when precision is required and the length, shape, and size of the tip used will define the shape of the fluid deposit and the performance of your dispense system.

The following tips are included with this system and are recommended for use with the Model 485 dispensing valve. Either tip kit can be used depending on the exact viscosity and application.

P3424 Dispensing Tip Kit for Low-Viscosity Materials (<500 cP)

| Part # | Color | Description | |
|--------|--------|-------------------|--|
| P3171 | Purple | 21 GA Needle Tip | |
| P3172 | Orange | 23 GA Needle Tip | |
| P3233 | Pink | 20 GA Tapered Tip | |
| P3247 | Red | 25 GA Tapered Tip | |

P3423 Dispensing Tip Kit for Medium- to High-Viscosity Materials (>500 cP)

| Part # | Color | Description | |
|--------|-------|-------------------|--|
| P3169 | Amber | 15 GA Needle Tip | |
| P3170 | Green | 18 GA Needle Tip | |
| P3232 | Green | 18 GA Tapered Tip | |
| P3247 | Red | 25 GA Tapered Tip | |

For assistance in optimal tip selection, contact Dymax Application Engineering. Visit www.dymax.com to see Dymax's dispensing tip selection.

System Configurations



A Systems Using a Cartridge Retainer (p. 8-9)




Systems Using a Bottle Drop-In Tank (p. 10-12)




Systems Using a 10-Gallon Pressure Tank (p. 13-15)

A - Systems Using a Cartridge Retainer

Packaged Components

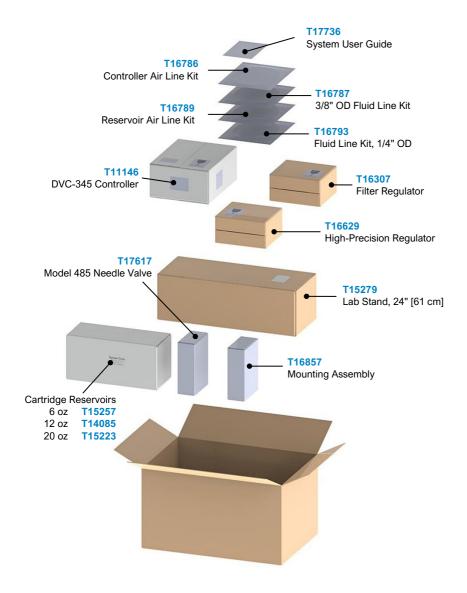


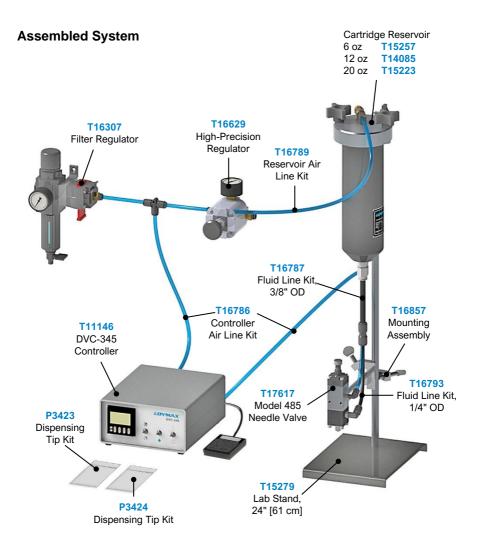


| User Supplied Items | Spare Parts |
|-----------------------------------------------------------------|--------------------------------------------|
| 80-100 psi air supply, ¼ NPT male fitting 110V power receptacle | 1/4" male to 1/4" quick-disconnect fitting |

B - Systems Using a Bottle Drop-In Tank

Packaged Components

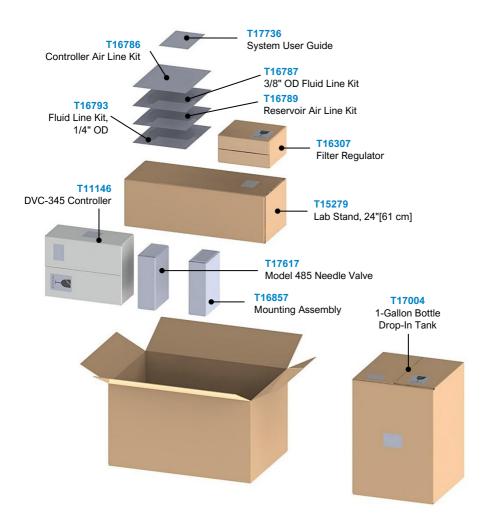


Assembled System

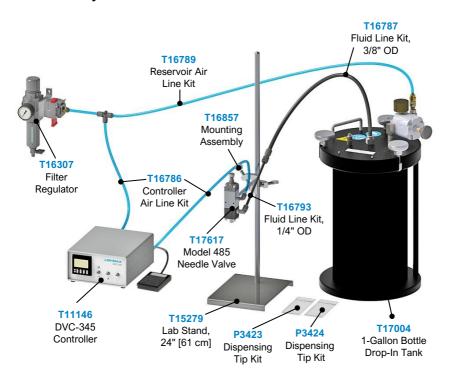

| User Supplied Items | Spare Parts |
|-----------------------------------------------------------------|--------------------------------------------|
| 80-100 psi air supply, ¼ NPT male fitting 110V power receptacle | 1/4" male to 1/4" quick-disconnect fitting |


Installing the Fluid Line to the Reservoir

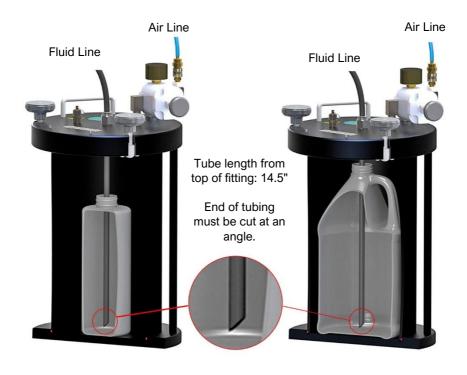


1-Liter Bottle 1-Gallon Bottle

C - Systems Using a 10-Gallon Pressure Tank

Packaged Components

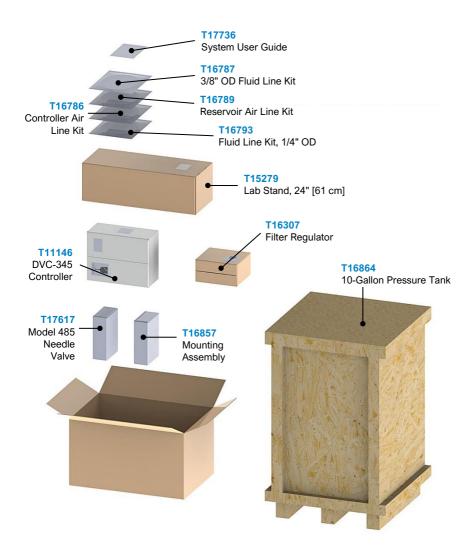

Assembled System

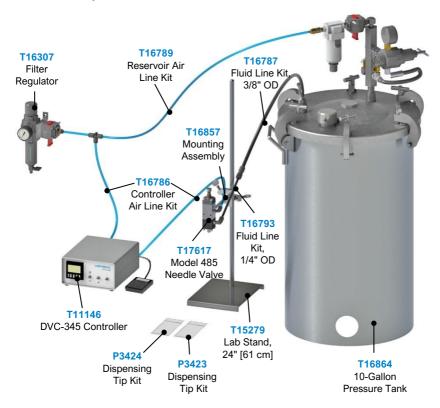

| User Supplied Items | Spare Parts |
|-----------------------------------------------------------------|--------------------------------------------|
| 80-100 psi air supply, ¼ NPT male fitting 110V power receptacle | 1/4" male to 1/4" quick-disconnect fitting |

Installing the Fluid Line to the Reservoir



Tube to be flush with the bottom of the lid tube

15-Liter Pail



Americas

USA | +1.860.482.1010 | info@dymax.com

Europe

Germany | +49 611.962.7900 | info_de@dymax.com |reland | +353 21.237.3016 | info_ie@dymax.com

Δsia

Singapore | +65.67522887 | info_ap@dymax.com Shanghai | +86.21.37285759 | dymaxasia@dymax.com Shenzhen | +86.755.83485759 | dymaxasia@dymax.com Hong Kong | +852.2460.7038 | dymaxasia@dymax.com Korea | +82.31.608.3434 | info_kr@dymax.com

© 2013 Dymax Corporation. All rights reserved. All trademarks in this guide, except where noted, are the property of, or used under license by Dymax Corporation, U.S.A. Delrin and Teflon are registered trademarks of DuPont.

Please note that most dispensing system applications are unique. Dymax does not warrant the fitness of the product for the intended application. Any warranty applicable to the product, its application and use is strictly limited to that contained in Dymax standard Conditions of Sale published on our website. Dymax recommends that any intended application be evaluated and tested by the user to ensure that desired performance criteria are satisfied. Dymax is willing to assist users in their performance testing and evaluation. Data sheets are available for valve controllers or pressure pots upon request.

MANOBODA T17736 114/2013