



BlueWave[®] AX-550 V2.0 Glass Replacement Kit Installation Instructions

1. Before starting, disconnect power to the unit.
2. Using the supplied allen wrench (2,5 mm), remove the two screws holding the rear bezel (Figure 1) and carefully lift and rotate the rear bezel and glass out of the assembly (Figure 2).

NOTE: If the old glass window has shattered, be sure to remove all debris before attempting to install the new glass window.

Figure 1.
Remove Two Screws


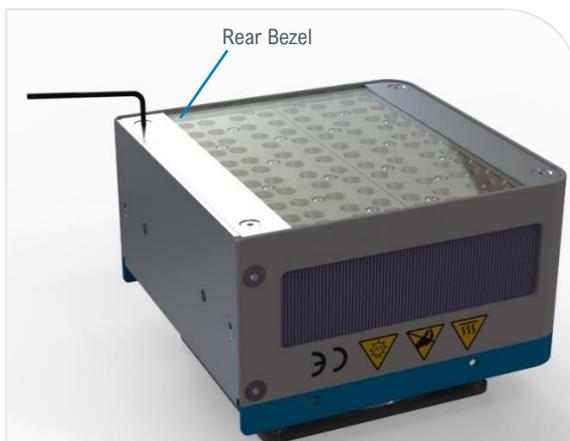



Figure 2.
Remove Rear Bezel & Glass

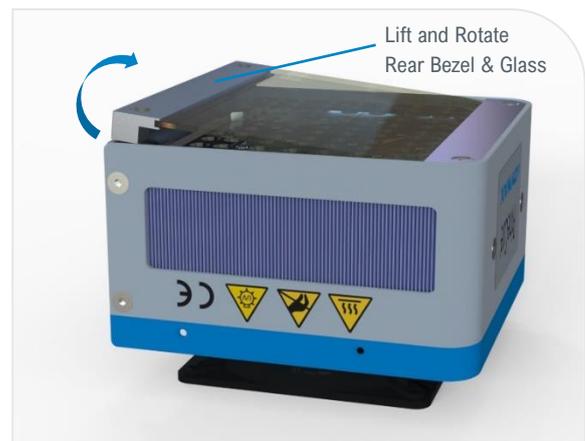

3. Remove the foam rubber seals from the grooves in the bezels. Remove the release liner from the pressure-sensitive tape on the replacement foam seals and install/adhere to the grooves in the front and rear bezels (Figure 3).
4. Wearing clean cotton or poly gloves, unwrap the new glass window and carefully clean it with the enclosed alcohol swab. Take care not to touch the glass window with bare hands, as any residue left on the window can adversely affect the performance of the unit.
5. With the glass tilted at about a 5° angle, carefully insert the edge of the glass into the groove in the front bezel and then install the rear bezel at the same angle. Rotate and lower the glass and rear bezel into the assembled position. (Figure 3)

NOTE: Verify the glass is in the groove, not under the groove.

Figure 3.
Install the New Glass

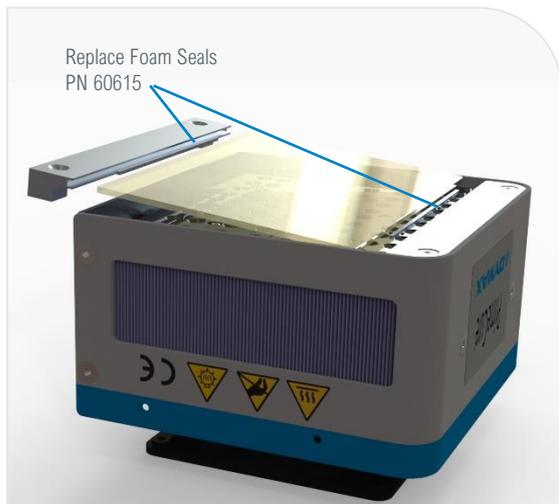

6. Reinstall the two screws attaching rear bezel.

www.dymax.com

Americas
USA | +1.860.482.1010 | info@dymax.com

Europe
Germany | +49 611.962.7900 | info_de@dymax.com
Ireland | +353 21.237.3016 | info_ie@dymax.com

Asia
Singapore | +65.67522887 | info_ap@dymax.com
Shanghai | +86.21.37285759 | dymaxasia@dymax.com
Shenzhen | +86.755.83485759 | dymaxasia@dymax.com
Hong Kong | +852.2460.7038 | dymaxasia@dymax.com
Korea | +82.31.608.3434 | info_kr@dymax.com

©2020 Dymax Corporation. All rights reserved. All trademarks in this guide, except where noted, are the property of, or used under license by, Dymax Corporation, U.S.A.

The data contained in this bulletin is of a general nature and is based on laboratory test conditions. Dymax Europe GmbH does not warrant the data contained in this bulletin. Any warranty applicable to products, its application and use is strictly limited to that contained in Dymax Europe GmbH's General Terms and Conditions of Sale published on our website. Dymax Europe GmbH does not assume any responsibility for test or performance results obtained by users. It is the user's responsibility to determine the suitability for the product application and purposes and the suitability for use in the user's intended manufacturing apparatus and methods. The user should adopt such precautions and use guidelines as may be reasonably advisable or necessary for the protection of property and persons. Nothing in this bulletin shall act as a representation that the product use or application will not infringe a patent owned by someone other than Dymax Corporation or act as a grant of license under any Dymax Corporation Patent. Dymax Europe GmbH recommends that each user adequately test its proposed use and application of the products before actual repetitive use, using the data contained in this bulletin as a general guide. QS100EU 12/30/2020