




# DVC-345 Valve Controller

User Guide



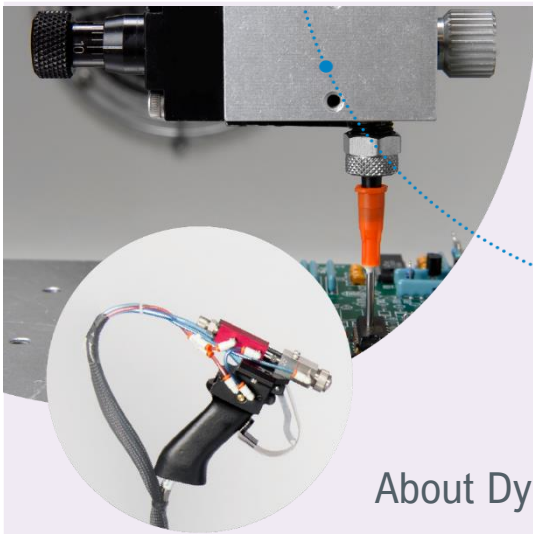

## About Dymax

Light-curable adhesives. Systems for light curing, fluid dispensing, and fluid packaging.

Dymax manufactures industrial adhesives, light-curable adhesives, epoxy resins, cyanoacrylates, and activator-cured adhesives. We also manufacture a complete line of manual fluid dispensing systems, automatic dispensing systems, and light-curing systems. Light-curing systems include LED light sources, spot, flood, and conveyor systems designed for compatibility and high performance with Dymax adhesives. Dymax adhesives and light-curing systems optimize the speed of automated assembly, allow for 100% in-line inspection, and increase throughput. System designs enable stand-alone configuration or integration into your existing assembly line.

Please note that most dispensing and curing system applications are unique. Dymax does not warrant the fitness of the product for the intended application. Any warranty applicable to the product, its application, and use is strictly limited to that contained in the Dymax standard Conditions of Sale. Dymax recommends that any intended application be evaluated and tested by the user to ensure that desired performance criteria are satisfied. Dymax is willing to assist users in their performance testing and evaluation. Data sheets are available for valve controllers or pressure pots upon request.

# Contents

<b>Introduction .....</b>	<b>4</b>
Where to Get Help.....	4
<b>Safety.....</b>	<b>4</b>
General Safety Considerations.....	5
Specific Safety Considerations.....	5
Personal Protective Equipment .....	5
<b>Product Overview .....</b>	<b>6</b>
Description of the DVC-345 .....	6
<b>Assembly and Setup .....</b>	<b>7</b>
Unpacking and Inspecting Your Shipment.....	7
Parts Included .....	7
System Interconnect .....	8
<b>Operating the Controller .....</b>	<b>10</b>
Setting the Dispense Time .....	10
<b>Spare Parts and Accessories .....</b>	<b>11</b>
<b>Specifications.....</b>	<b>11</b>
<b>Declaration of Conformity .....</b>	<b>13</b>
<b>Index .....</b>	<b>15</b>

# Introduction

This guide describes how to use the Dymax DVC-345 digital valve controller (T11146). Sections in this guide describe how to assemble, use, and maintain the valve controller safely and efficiently.

## Intended Audience

Dymax prepared this user guide for experienced process engineers, maintenance technicians, and manufacturing personnel. If you are new to pneumatically operated fluid dispensing equipment and do not understand the instructions, contact Dymax Application Engineering to answer your questions before using the equipment.

## Where to Get Help

Customer Support and Applications Engineering teams are available by phone and email in Germany, Monday through Friday, from 8:00 a.m. to 5:00 p.m. Central European Time. You can also email Dymax Europe GmbH at [info\\_de@dymax.com](mailto:info_de@dymax.com). Please see the back cover for worldwide contact information.

Additional resources are available to ensure a trouble-free experience with our products:

- Detailed product information on [www.dymax.com](http://www.dymax.com)
- Dymax adhesive Product Data Sheets (PDS) on our website
- Material Safety Data Sheets (SDS) provided with shipments of Dymax adhesives

## Safety



**WARNING!** *If you use this fluid dispensing equipment without first reading and understanding the information in this guide, personal injury can result from the uncontrolled release of high-pressure gas, injection injury, or exposure to chemicals. To reduce the risk of injury, read and understand this guide before assembling and using Dymax fluid dispensing equipment.*

## General Safety Considerations

All users of Dymax fluid dispensing equipment should read and understand this user guide before assembling and using the equipment.

To learn about the safe handling and use of dispensing fluids, obtain and read the SDS for each fluid before using it. Dymax includes an SDS with each adhesive sold. SDS for Dymax products can also be requested through the Dymax website.

The safety of any system incorporating the DVC-345 digital valve controller is the responsibility of the assembler of the system. The protection provided by the DVC-345 digital valve controller may be impaired if the controller is not operated as specified by this user guide.

## Specific Safety Considerations

### Using Safe Operating Pressures

Pressurizing the components in the dispensing system beyond the maximum recommended pressure can result in the rupturing of components and serious personal injury. To minimize the risk of rupturing components and injury, do not exceed the maximum operating pressure of the components in your fluid dispensing system (see system specifications on page 11).

### Personal Protective Equipment

Operators are recommended to wear any personal protective equipment specified by their company's safety policy for the materials used during dispensing. Personal protective equipment should be in place and used at all times before pressurizing the system and when handling any potentially hazardous materials.

# Product Overview

## Description of the DVC-345

The DVC-345 digital valve controller provides a precise and settable time duration for controlling (opening and closing) a variety of dispense valves. This dispense controller features electronically controlled dispense time as well as DC operation. This ensures precise and repeatable shots with adjustable shot time durations of as little as 0.001 seconds to 9.999 seconds.

**Figure 1.**  
DVC-345 Component Diagram (Front)



**Figure 2.**  
DVC-345 Component Diagram (Rear)



# Assembly and Setup

## Unpacking and Inspecting Your Shipment

When your DVC-345 digital valve controller arrives, inspect the boxes for damage and notify the shipper of box damage immediately.


Open each box and check for equipment damage. If parts are damaged, notify the shipper and submit a claim for the damaged parts. Contact Dymax so that new parts can be shipped to you immediately.

Check that the parts included in your order match those listed below. If parts are missing, contact your local Dymax representative or Dymax Customer Support to resolve the problem.

## Parts Included

- DVC-345 digital valve controller
- Foot switch
- Power supply
- DVC-345 user guide

**Figure 3.**  
Unpacking Diagram

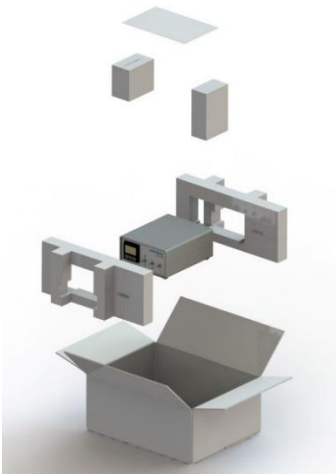

## System Interconnect

Refer to Table 1 to determine how to plumb the particular dispensing valve you are using with the digital controller. For Model 300, 455, 475, 775, and 826 dispensing valves, one of the Air-Out Ports must be plugged since these dispensing valves are single acting.

Begin set-up by attaching a 0.25" [0.64 cm] Air Line to the Air-In Fitting on the rear of the Controller.

Next, ensure that the Power Toggle Switch is in the OFF position. Plug the cylindrical end of the DC Wall Mount Adapter into the Power Supply Receptacle on the back of the Controller and plug the DC Wall Adapter in an appropriate outlet.


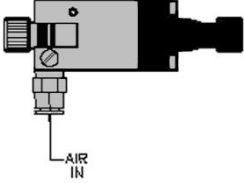
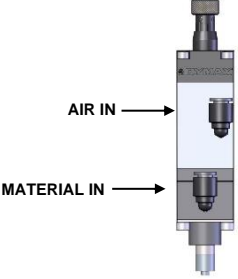
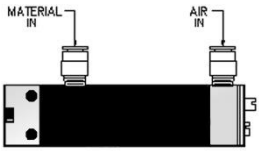
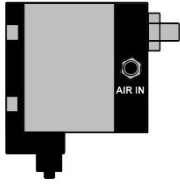
Plug the Foot Switch into the External Trigger Receptacle on the back of the Controller.

Attach the Material Reservoir to the Dispensing Valve and the appropriate air supply pressure to the Material Reservoir. *Consult Dymax if you are unsure of this step. Excessive air pressure to a Reservoir can result in a dangerous or deadly situation!*

The system is ready for operation.



**Table 1.**  
 Dispensing Valve Plumbing Configurations

Valve Diagram	Plumbing Instructions
 <p>AIR IN →</p> <p>The diagram shows a vertical, cylindrical valve with a top cap and a bottom stem. An arrow labeled 'AIR IN' points to a port on the left side of the valve body.</p>	<p><b>Model 300: Single-acting, normally closed diaphragm valve.</b></p> <p>Plug Port No. 1 (normally open) on the back of the controller and plumb Port No. 2 (normally closed) to the Air-In Port on the dispensing valve.</p>
 <p>AIR IN</p> <p>The diagram shows a horizontal valve with a top cap and a bottom stem. An arrow labeled 'AIR IN' points to a port on the left side of the valve body.</p>	<p><b>Model 455: Single-acting, normally closed pinch valve.</b></p> <p>Plug Port No. 1 (normally open) on the back of the controller and plumb Port No. 2 (normally closed) to the Air-In Port on the dispensing valve.</p>
 <p>AIR IN →</p> <p>MATERIAL IN →</p> <p>The diagram shows a vertical valve with a top cap and a bottom stem. Two arrows point to ports on the left side: 'AIR IN' for the upper port and 'MATERIAL IN' for the lower port.</p>	<p><b>Model 475: Single-acting, normally closed diaphragm valve.</b></p> <p>Plug Port No. 1 (normally open) on the back of the controller and plumb Port No. 2 (normally closed) to the Air-In Port on the dispensing valve.</p>
 <p>MATERIAL IN</p> <p>AIR IN</p> <p>The diagram shows a horizontal valve with a top cap and a bottom stem. Two arrows point to ports on the top side: 'MATERIAL IN' for the left port and 'AIR IN' for the right port.</p>	<p><b>Model 775: Single-acting, normally closed spool valve.</b></p> <p>Plug Port No. 1 (normally open) on the back of the controller and plumb Port No. 2 to the Air-In Port on the dispensing valve.</p>
 <p>AIR IN</p> <p>The diagram shows a horizontal valve with a top cap and a bottom stem. An arrow labeled 'AIR IN' points to a port on the right side of the valve body.</p>	<p><b>Model 826: Single-acting, normally closed pinch valve.</b></p> <p>Plug Port No. 1 (normally open) on the back of the controller and plumb Port No. 2 to the Air-In Port on the dispensing valve.</p>

# Operating the Controller

## Setting the Dispense Time

The digital timer on the front of the controller uses up and down arrows to set the required dispense time. The time range is from 0.001 seconds to 9.999 seconds with a settable resolution of .001 seconds.

**Figure 4.**  
Front Panel



- **(A) Up Arrow** - used to increase the present value at each digit.
- **(B) Down Arrow** - used to decrease the present value at each digit.
- **(C) Mode** - changes modes and setting items on the timer.
- **(D) Reset** - used to reset the current count.
- **(E) Active Timing Value**
- **(F) Current Preset Timing Value**
- **(G) Left Toggle** - used to switch the system between timed or untimed mode.

**Timed Mode:** hitting the center trigger toggle or foot switch will open the dispense valve for the duration preset in the digital timer.

**Untimed Mode:** the valve will remain open for as long as the trigger or foot switch is held down.

- **(H) Center Toggle** - used to trigger the valve. Actuating the supplied foot switch performs this same function.
- **(I) Right Toggle** - turns the system's power on or off.

# Spare Parts and Accessories


Item	Part Number
Foot Switch	T14999
Power Supply	T11624

# Specifications

Property	Specification
<b>Part Numbers</b>	<b>T11146</b> DVC-345 Digital Valve Controller
<b>Power Requirements</b>	Switch-mode auto-ranging power supply; includes four power plug adapters Input: 100-240V~, 50-60 Hz Output: 24V --- 0.35A
<b>Air Pressure Requirements (into external regulator)</b>	60 psi [0.413 MPa] minimum/100 psi [0.689 MPa] maximum 25 micron filtered air
<b>Operating Temperature</b>	0-50°C [32-122°F]
<b>Timer</b>	Digital timer; programmable to 0.001-9.999 seconds in 0.001 second increments
<b>Activation</b>	Foot switch or PLC
<b>Dimensions (W x H x D)</b>	6.25" x 8" x 3.5" [15.9 cm x 20.3 cm x 8.9 cm]
<b>Weight</b>	2.8 lbs [1.27 kg]
<b>Unit Warranty</b>	1 year from purchase date



**Figure 5.**  
Controller Dimensions

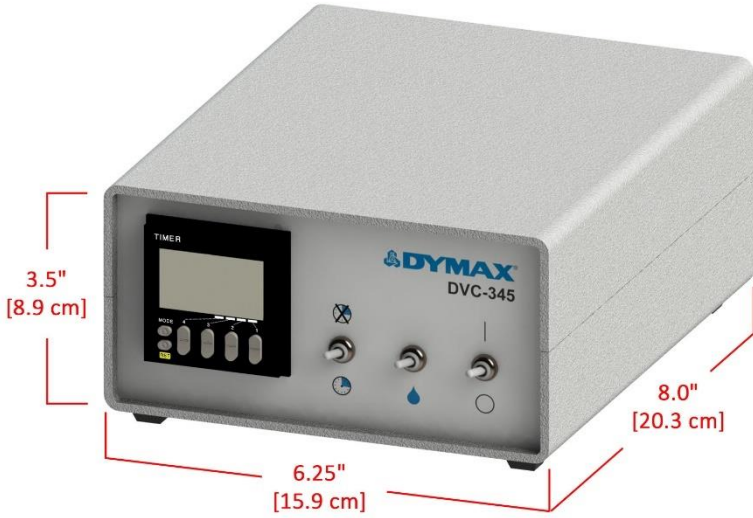

# Declaration of Conformity



## Declaration of Conformity

Manufacturer:  
Dymax Corporation  
318 Industrial Lane  
Torrington, CT 06790, USA

European Address:  
Dymax Europe GmbH  
Kasteler Str.45  
Geb.G359  
Wiesbaden Germany 65203

UK Address:  
Dymax  
1b Hunts Grove Drive, Hardwick,  
Gloucester, Gloucestershire, GL2 4BH  
United Kingdom

Product description:  
Model name(s):  
Digital Valve Controller  
DVC-345

*This product complies with the following Directives, legal acts and standards:*

European Union Compliance (CE)  
Electromagnetic Compatibility Directive (2014/30/EU):  
EN 55011:2009 + A1:2010  
EN 61000-3-2:2014 Class A  
EN 61000-3-3:2013  
EN 61326-1:2013

Low Voltage Directive (2014/35/EU):  
EN 61010-1:2010 (3<sup>rd</sup> Edition)

RoHS Directive EU (2015/863)

### Declaration:

*I declare that the above information in relation to the supply and manufacture of this product is in conformity with the above standards and directives.*



3-10-2021

Name

Date

Authorized Signatory:  
Richard MacCutcheon  
Engineering Manager  
Dymax Corporation  
Torrington, CT., USA

Representative in Europe:  
Dominik Stephan  
Director, Equipment  
Dymax EUROPE GmbH  
Wiesbaden, Germany

Representative in UK:  
Kevin Westcott  
Account Manager  
Dymax  
Gloucester, United Kingdom

[www.dymax.com](http://www.dymax.com)

**Americas**  
USA | +1.800.482.1010 | [info@dymax.com](mailto:info@dymax.com)

**Europe**  
Germany | +49 611.362.7900 | [info\\_eu@dymax.com](mailto:info_eu@dymax.com)  
Ireland | +353 21.252.3016 | [info\\_ie@dymax.com](mailto:info_ie@dymax.com)

**Asia**  
Singapore | +65 67522887 | [info\\_ap@dymax.com](mailto:info_ap@dymax.com)  
Shanghai | +86 21 31286751 | [dymaciasia@dymax.com](mailto:dymaciasia@dymax.com)  
Shenzhen | +86 755 25195799 | [dymaciasa@dymax.com](mailto:dymaciasa@dymax.com)  
Hong Kong | +852 2460 7038 | [dymaciasa@dymax.com](mailto:dymaciasa@dymax.com)  
Korea | +82 31 608 3434 | [info\\_kr@dymax.com](mailto:info_kr@dymax.com)

©2020 Dymax Corporation. All rights reserved. All trademarks in this guide, except where noted, are the property of, or used under license by, Dymax Corporation, U.S.A.

# Warranty

From date of purchase, Dymax Corporation offers a one-year warranty against defects in material and workmanship on all system components *with proof of purchase and purchase date*. Unauthorized repair, modification, or improper use of equipment may void your warranty benefits. The use of aftermarket replacement parts not supplied or approved by Dymax Corporation, will void any effective warranties and may result in damage to the equipment.

***IMPORTANT NOTE: DYMAX CORPORATION RESERVES THE RIGHT TO INVALIDATE ANY WARRANTIES, EXPRESSED OR IMPLIED, DUE TO ANY REPAIRS PERFORMED OR ATTEMPTED ON DYMAX EQUIPMENT WITHOUT WRITTEN AUTHORIZATION FROM DYMAX. THOSE CORRECTIVE ACTIONS LISTED ABOVE ARE LIMITED TO THIS AUTHORIZATION.***

# Index

- Air Connections, 8
- Assembly and Setup, 7
- Dimensions, 12
- Dymax Contact Information, 4
- Fluid Connections, 8
- Help, 4
- Operation, 10
- Optional Equipment, *11*
- Parts Included, 8
- Plumbing Diagrams, 9
- Product Overview, 6
- Safety, 5
  - Personal Protection Equipment, 5
  - Using Safe Operating Pressures, 5
- Setting the Dispense Time, 10
- Spare Parts and Accessories, *11*
- Specifications, 11
- System Components, 6
- System Interconnect, 8
- Unpacking, 7
- Warranty, 13



#### Americas

USA | +1.860.482.1010 | info@dymax.com

#### Europe

Germany | +49 611.962.7900 | info\_de@dymax.com

Ireland | +353 21.237.3016 | info\_ie@dymax.com

#### Asia

Singapore | +65.67522887 | info\_ap@dymax.com

Shanghai | +86.21.37285759 | dymaxasia@dymax.com

Shenzhen | +86.755.83485759 | dymaxasia@dymax.com

Hong Kong | +852.2460.7038 | dymaxasia@dymax.com

Korea | +82.31.608.3434 | info\_kr@dymax.com

© 2012-2021 Dymax Corporation. All rights reserved. All trademarks in this guide, except where noted, are the property of, or used under license by Dymax Corporation, U.S.A.

The data contained in this bulletin is of a general nature and is based on laboratory test conditions. Dymax Europe GmbH does not warrant the data contained in this bulletin. Any warranty applicable to products, its application and use is strictly limited to that contained in Dymax Europe GmbH's General Terms and Conditions of Sale published on our website. Dymax Europe GmbH does not assume any responsibility for test or performance results obtained by users. It is the user's responsibility to determine the suitability for the product application and purposes and the suitability for use in the user's intended manufacturing apparatus and methods. The user should adopt such precautions and use guidelines as may be reasonably advisable or necessary for the protection of property and persons. Nothing in this bulletin shall act as a representation that the product use or application will not infringe a patent owned by someone other than Dymax Corporation or act as a grant of license under any Dymax Corporation Patent. Dymax Europe GmbH recommends that each user adequately test its proposed use and application of the products before actual repetitive use, using the data contained in this bulletin as a general guide.

T16485 MAN028EU 3/19/2021